
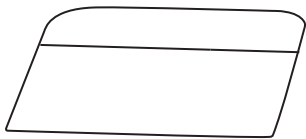


FORD SUPER DUTY

VPC3Z-2120000-A


PAINT PROTECTION FILM INSTALLATION

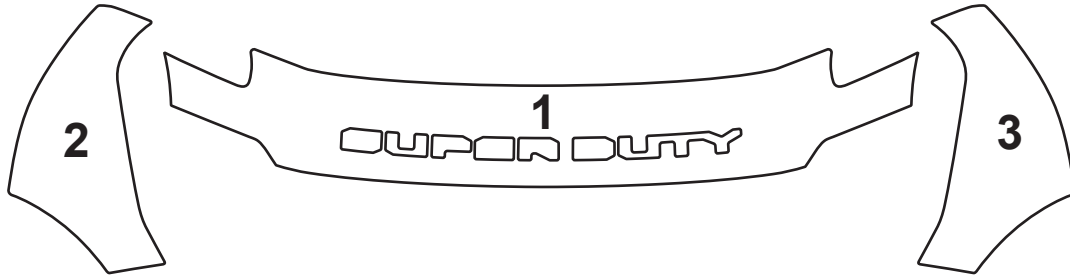


H₂O




1

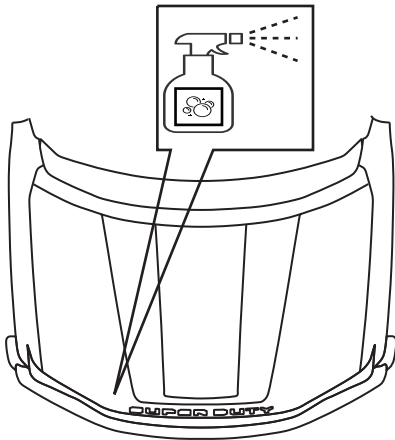




2

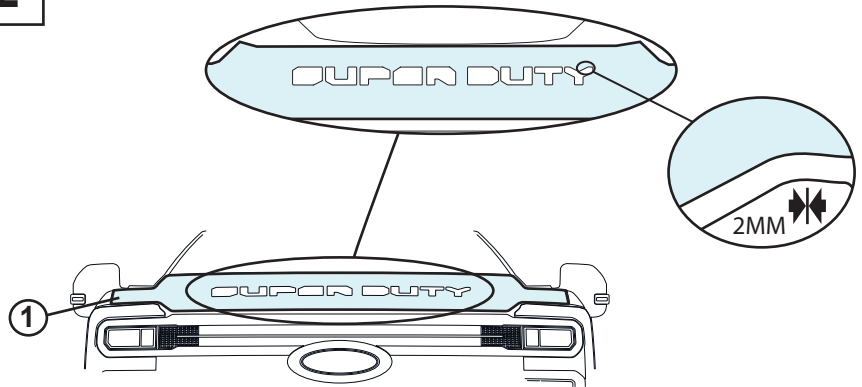




3

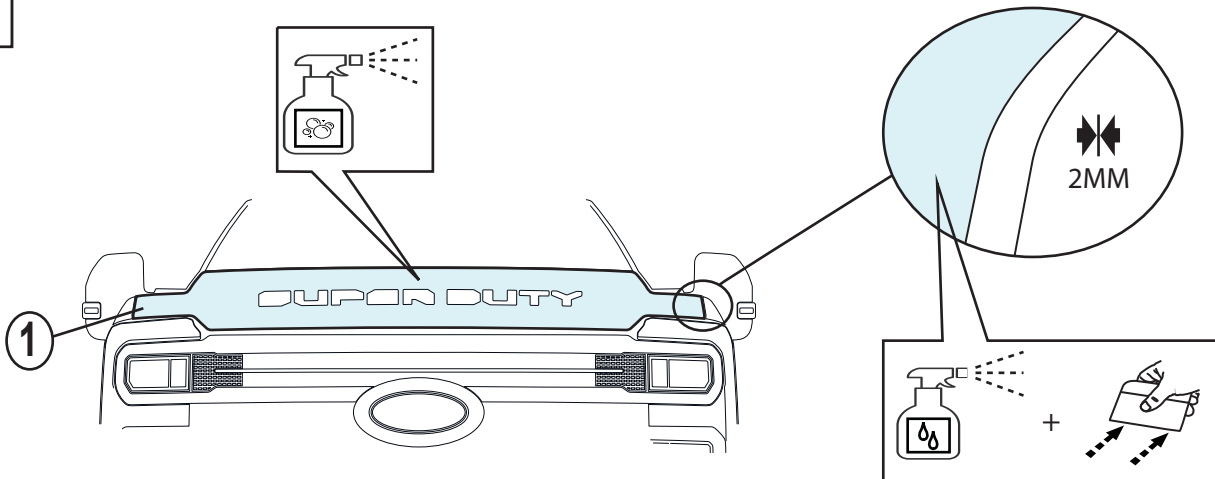




4

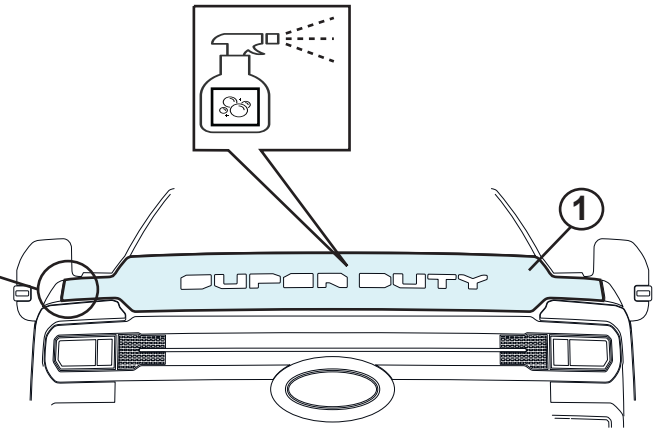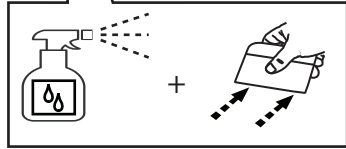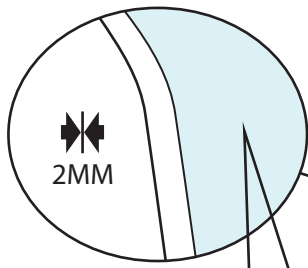




5

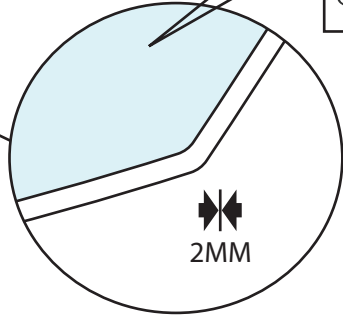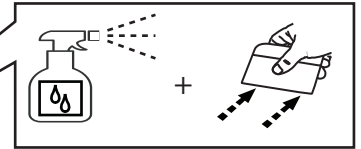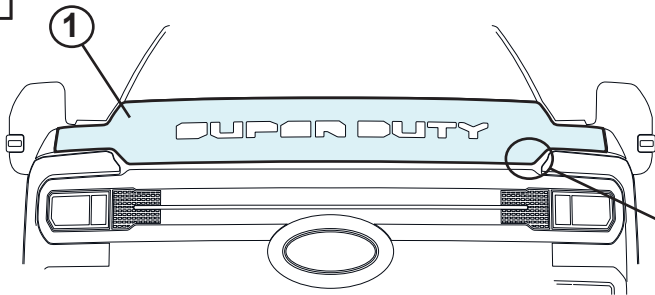


6

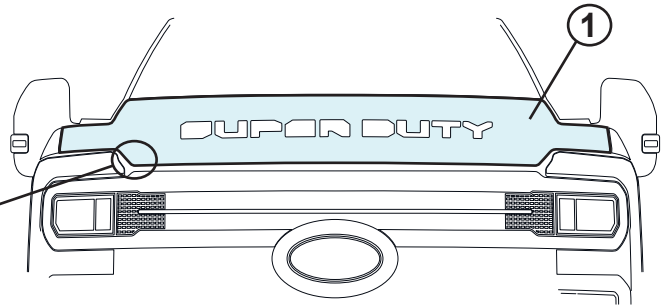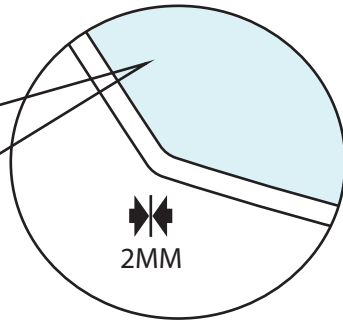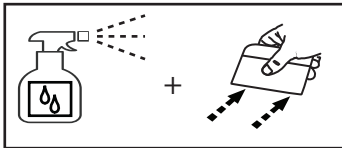


7

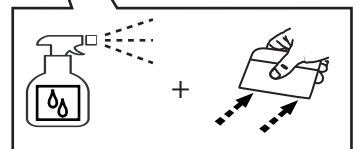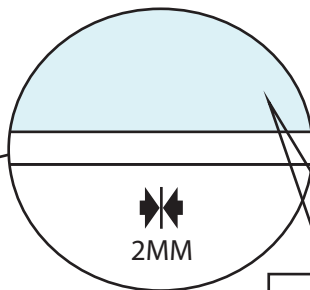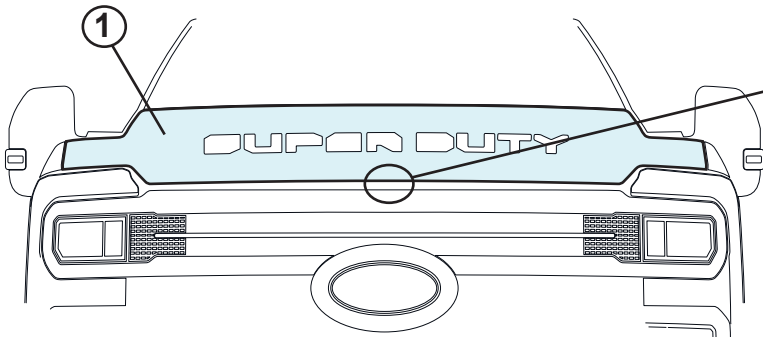


8

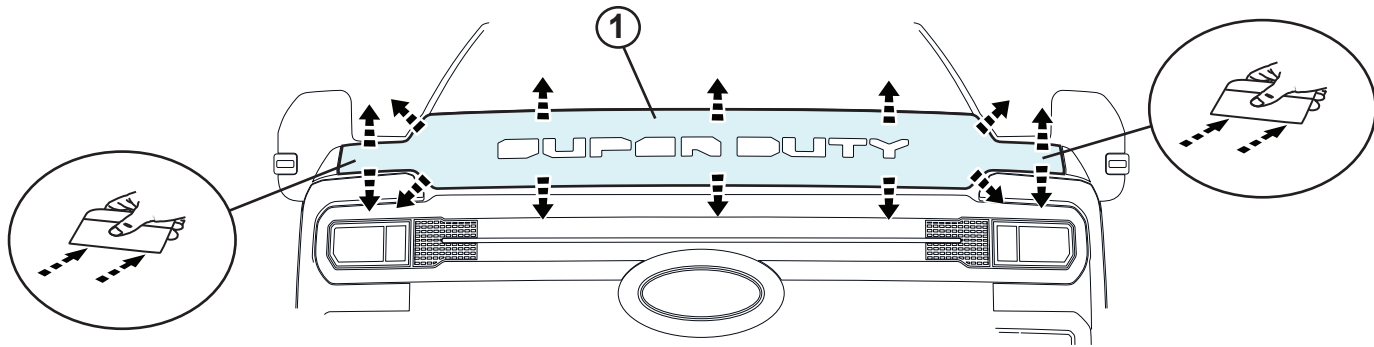


9

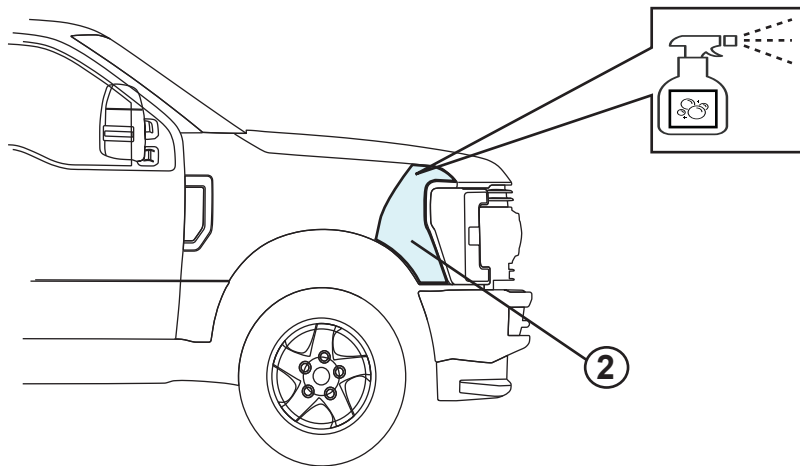


10

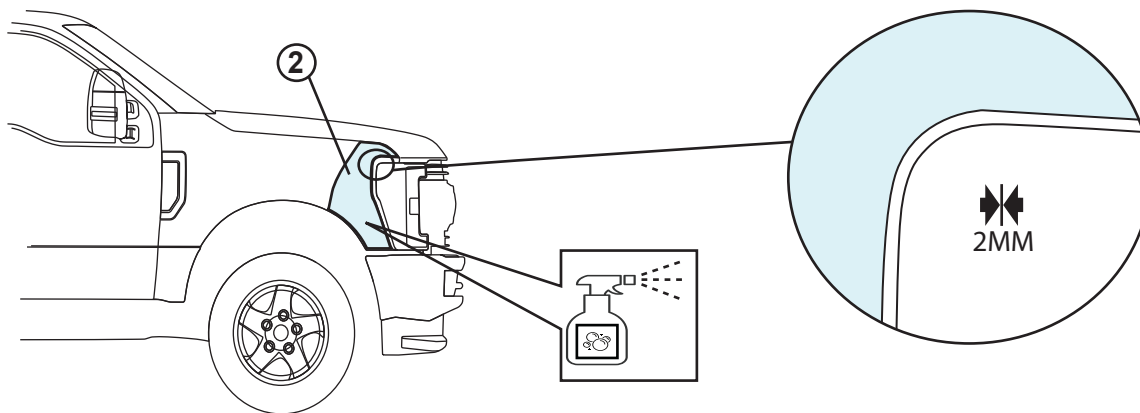


11

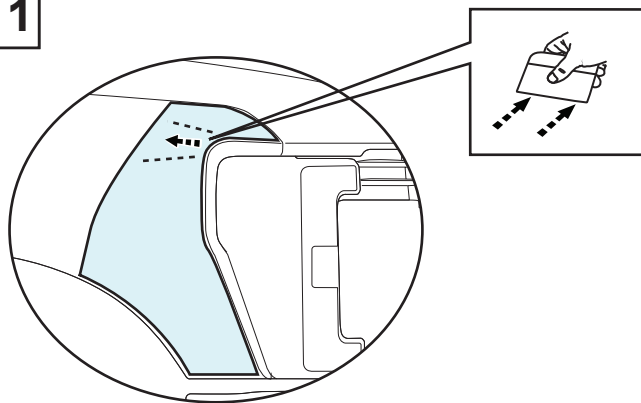


12

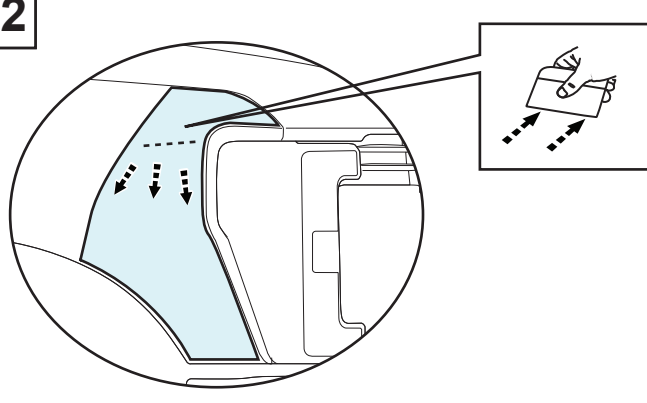


13

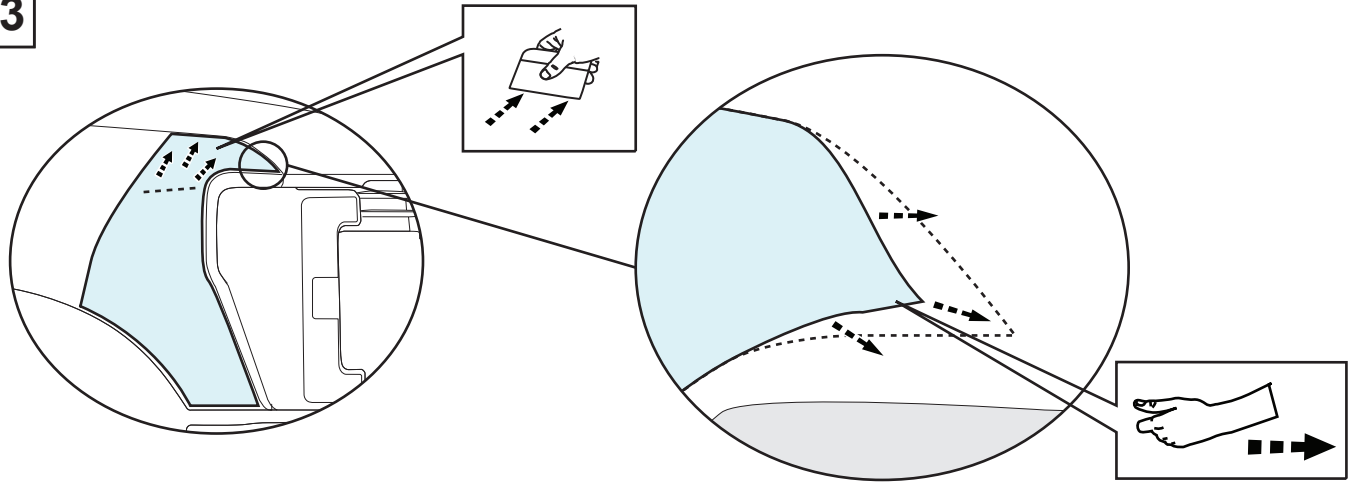


14

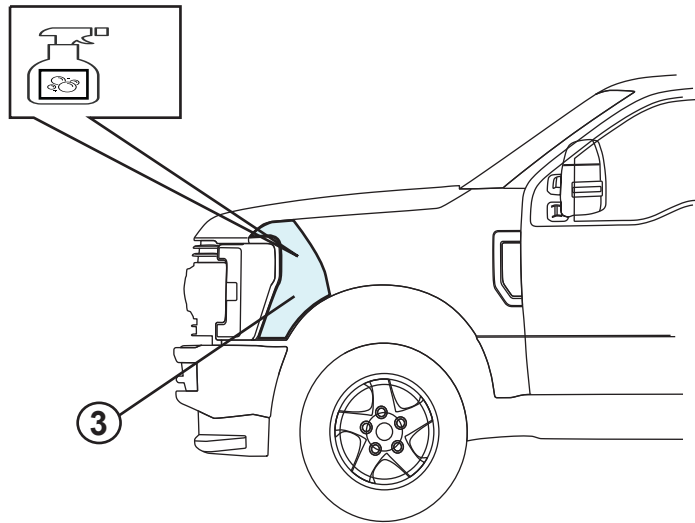


15

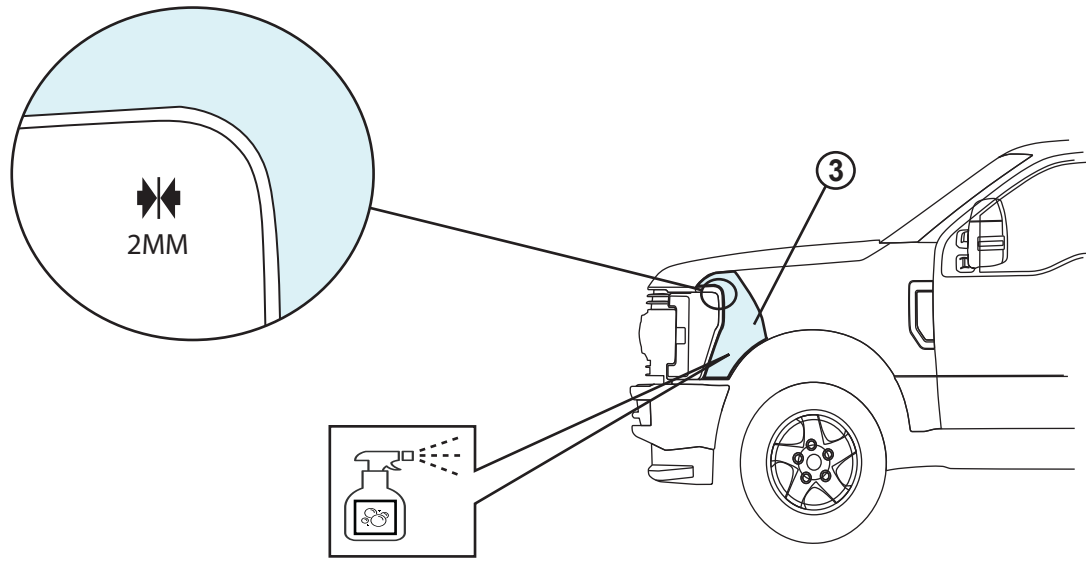

16

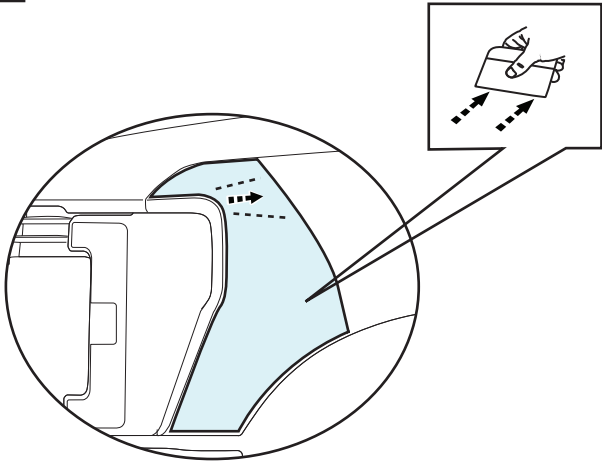

17

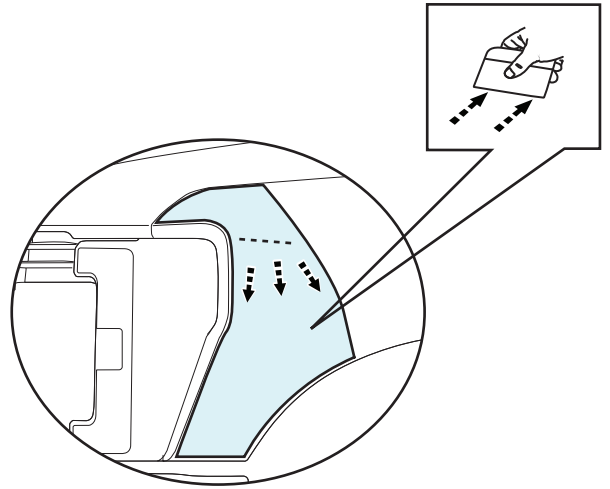

18

