
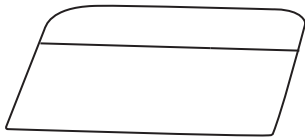


# FORD MUSTANG MACHE-E

VRK9J-2120000-A





## PAINT PROTECTION FILM INSTALLATION

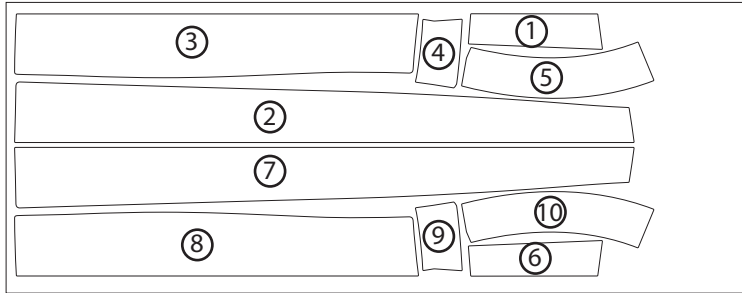





H<sub>2</sub>O






1

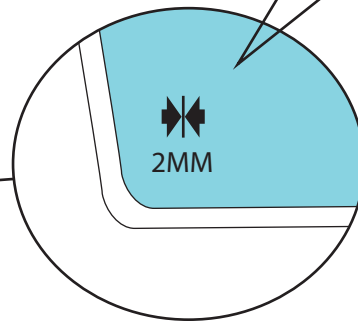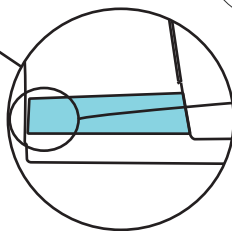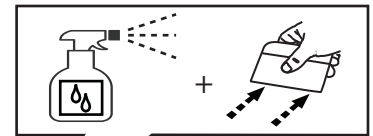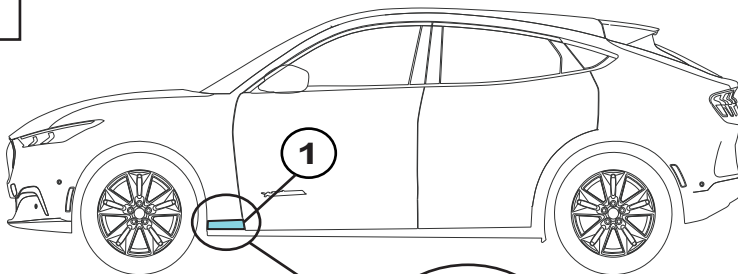




2

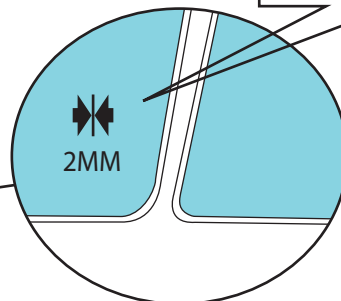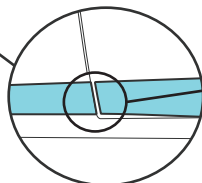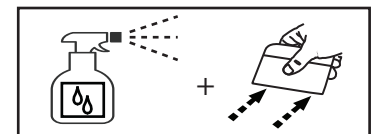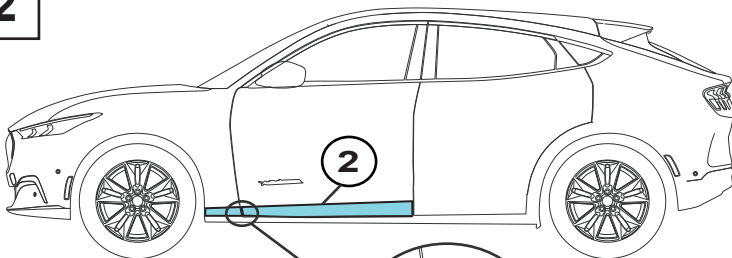




3

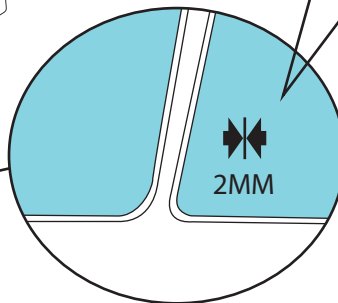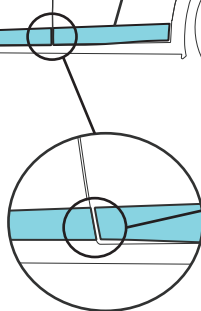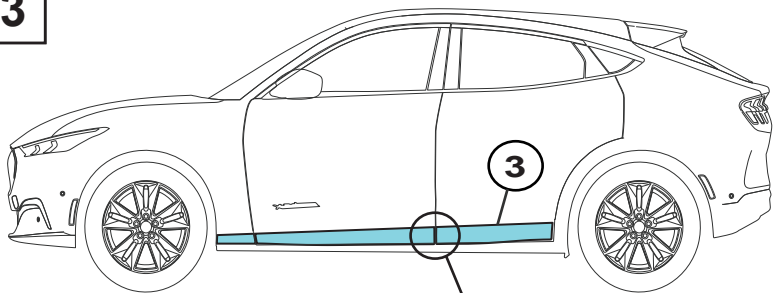





4

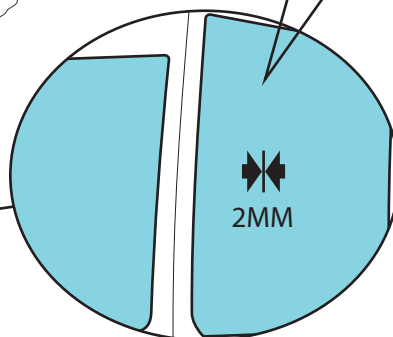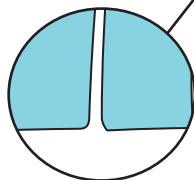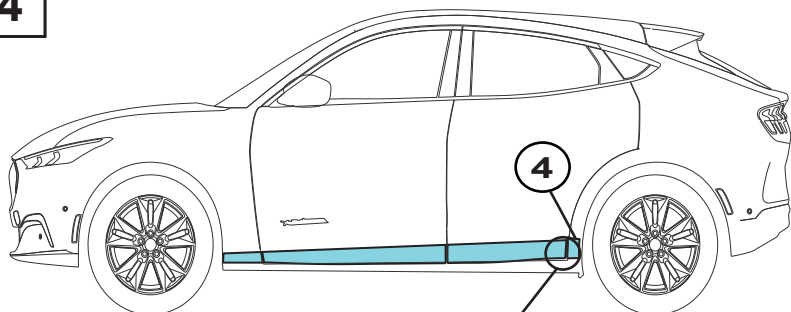





5

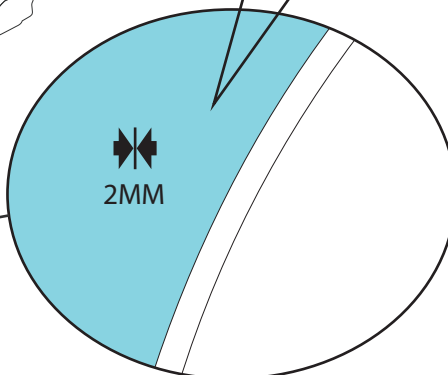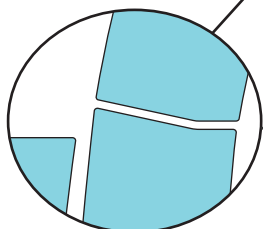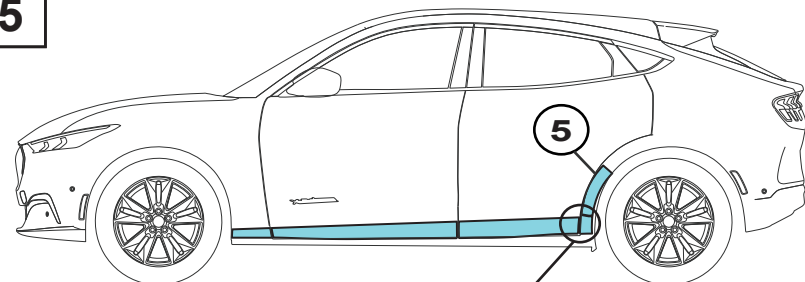





6

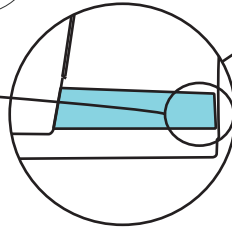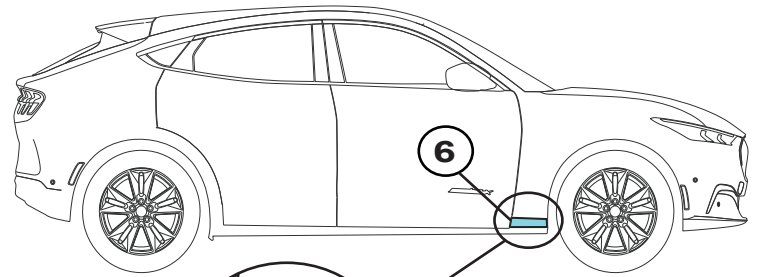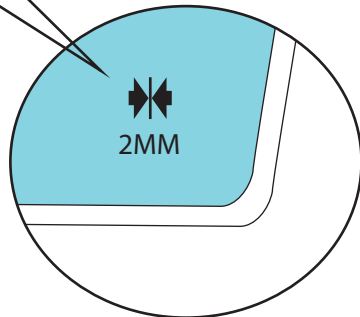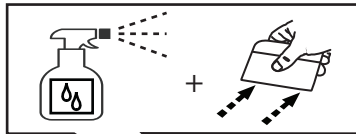





7

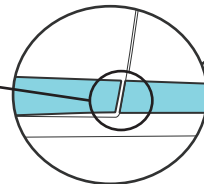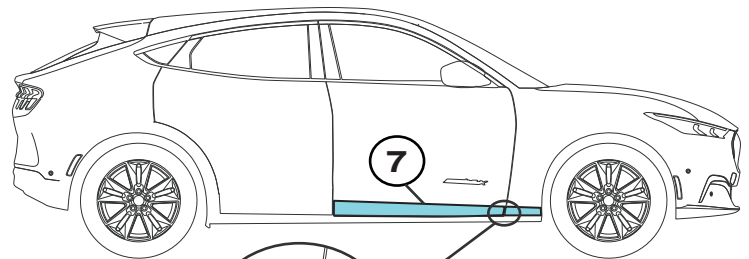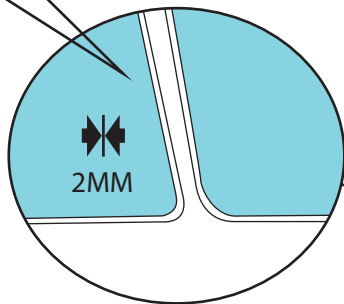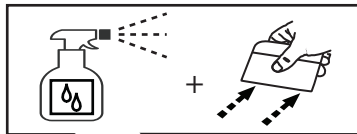

8

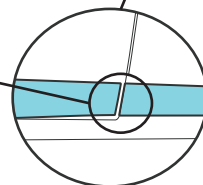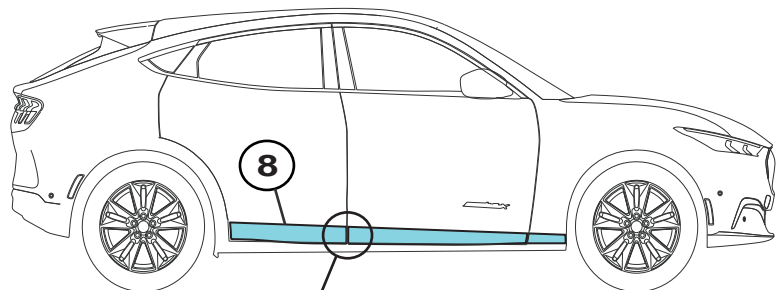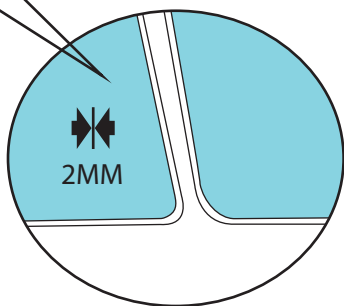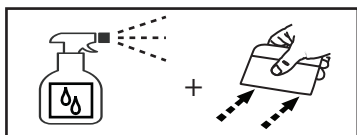

9

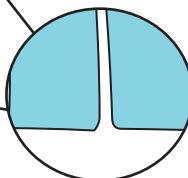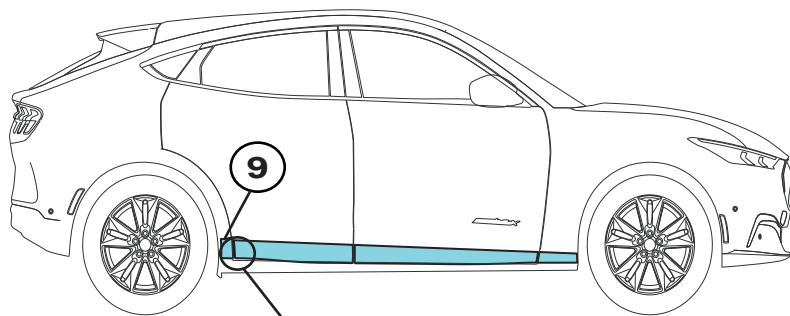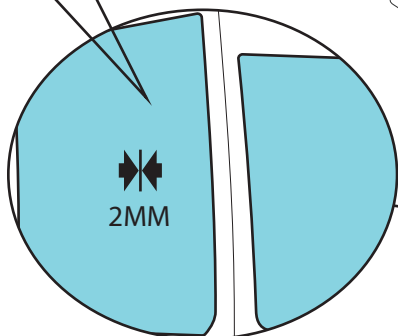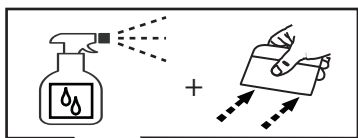

10

